

# **John Deere Petrol Mower**

Wendover Ashbrook Allotments



**Blade Control &  
Engine Cut-Out Lever**

**Travel Speed Lever**


**Traction Clutch Lever**

**Starter Handle**

**Oil Filler Cap / Dip Stick**

**Unleaded Petrol Filler Cap**

**Petrol Pump  
Primer**

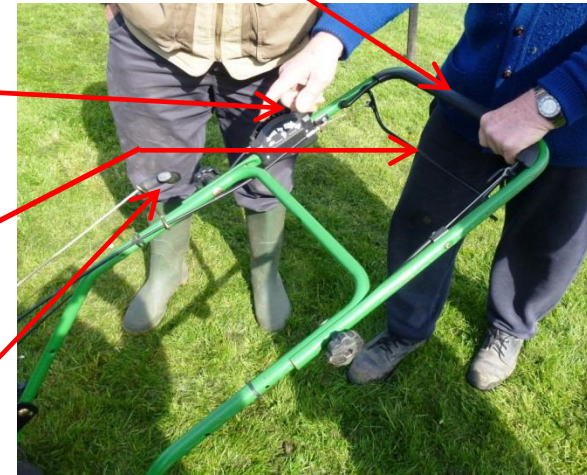

## **Operating Checklist**

- **Refer to Separate Safety Instructions**
- Test safety systems.
- Check fuel level.
- Check engine oil level.
- Remove grass and debris from machine.
- Check area below machine for leaks.

## **Starting the Mower Engine**

- Press petrol pump primer about 6 times
- Grip the blade control / engine cut-out lever to close against the mower frame.
- Pull the starter handle to start motor
- When the engine is idling evenly, adjust the travel speed lever to the required speed for operation and lift traction clutch lever to propel mower forwards.
- *Note: the travel speed level cannot be moved until the engine is running.*


## **Stopping the Mower Engine**

- Release the blade control / engine cut-out lever.



**Rear Axle Height Adjustment Lever**

**Front Axle Height Adjustment Lever**

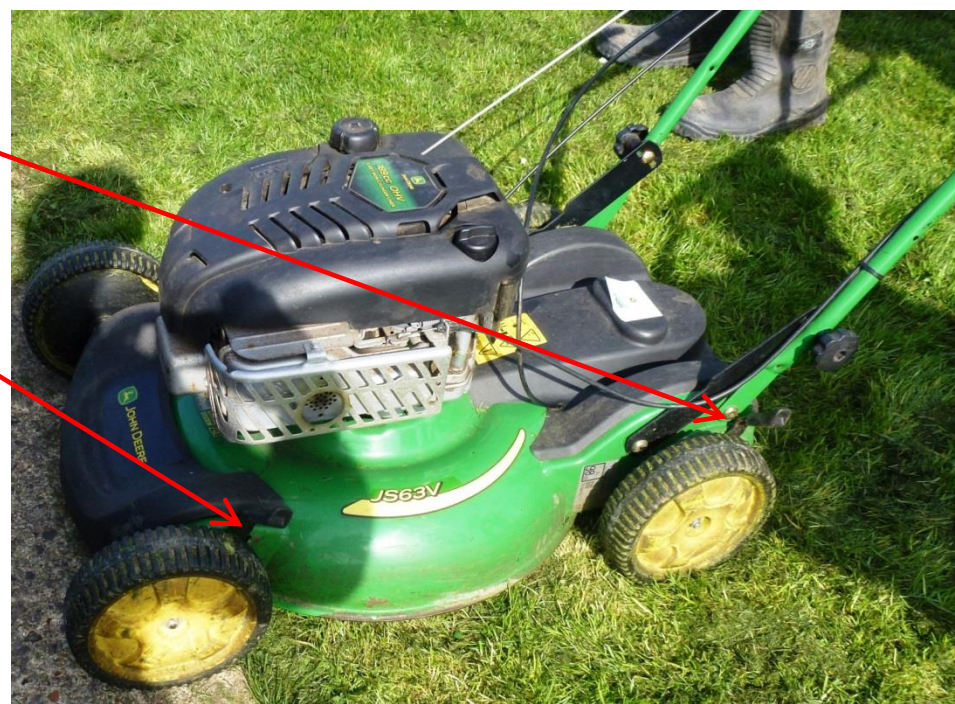

**To Clean Underside, Tip Mower  
Onto Its Side as Shown with the  
Grass Cuttings Outlet Upwards.**

**Do Not Tip the Opposite Way**

