

# **Atco Rotavator**

Wendover Ashbrook Allotments

**Clutch Lever (Start / Stop  
Tines Rotating)**

**Handlebar Height  
Adjustment Lever**



**Engine Speed  
Control/Stop Lever**

**Detachable Wheeled  
Undercarriage**

**Rotavator Tines**

**Starter Handle  
(Recoils)**






**Unleaded Petrol  
Filler Cap**

**Handlebar Height  
Adjustment Lever**

**Handlebar Slew  
Adjustment Lever**

**Rotavator Adjustable  
Dig Depth Stake**

**Oil Filler Cap**

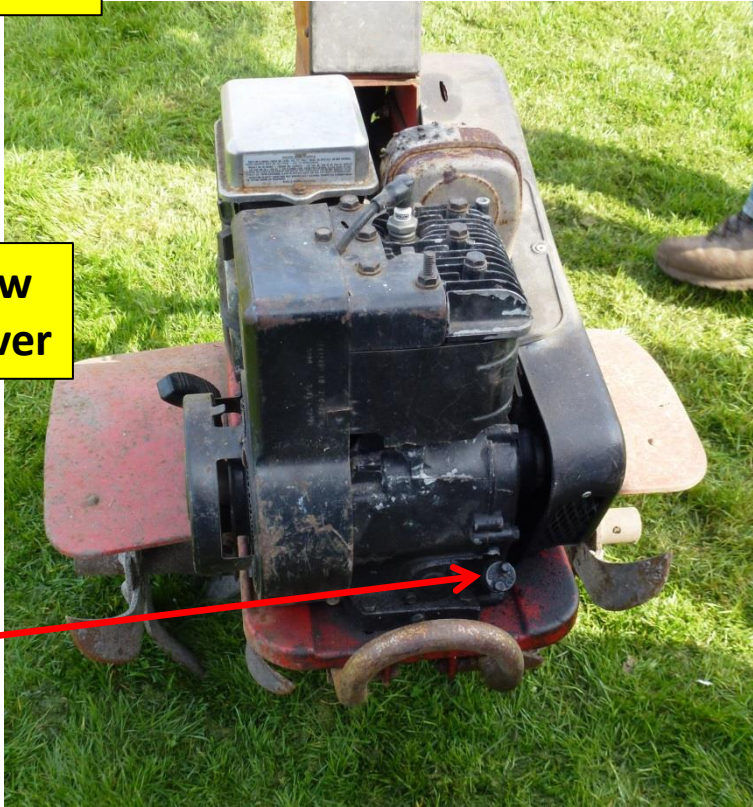

## **Operating Checklist**

- **Refer to Separate Safety Instructions**
- Test safety systems.
- Check fuel and engine oil levels.
- Check area below machine for leaks.

## **Starting the Rotavator**

- Move rotavator by pushing down on handlebars to lift tines and use the wheeled undercarriage.
- Position the rotavator at the beginning of the area to be cultivated and remove wheeled undercarriage. (Store retaining pin somewhere safe).
- Set the dig depth stake to the appropriate position.
- Move engine speed control lever to max speed position.
- Pull the recoil starter handle to until engine starts.
- When the engine is idling evenly, adjust the engine speed control lever to the required speed for operation.
- To start the tines rotating, squeeze the clutch lever on the left handlebar. To stop the tines from turning release this lever.

## **Stopping the Rotavator**

- Release the tine start / stop lever.
- Move the engine speed control to stop position.
- Reattach wheeled undercarriage to return to garage or move to new location.